



Microbee Plug Pak Power supply


Instructions for assembly




Kit Contents :
Plug pak unit, 1x 3.5mm RED plug, 1 x 3.5mm Black Plug, 1 x 5pin DIN to 4 RCA lead, 1 x strain relief grommet, screw & spring washer, 4 x case screws




Step 1: Remove the Yellow RCA plug, strip & tin the bare ends. Place the strain relief grommet over the cable & tie a small knot in the cable as shown.

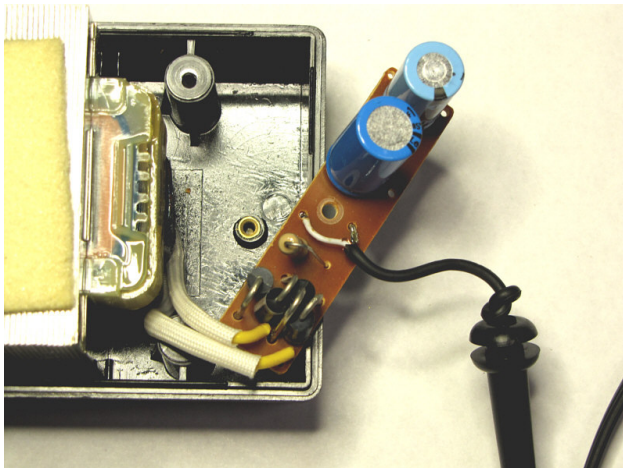

Step 2: Connect the wire to the rectifier PCB at the holes in the PCB as shown in the photo. The inner wire (the white insulated one) is the positive lead.

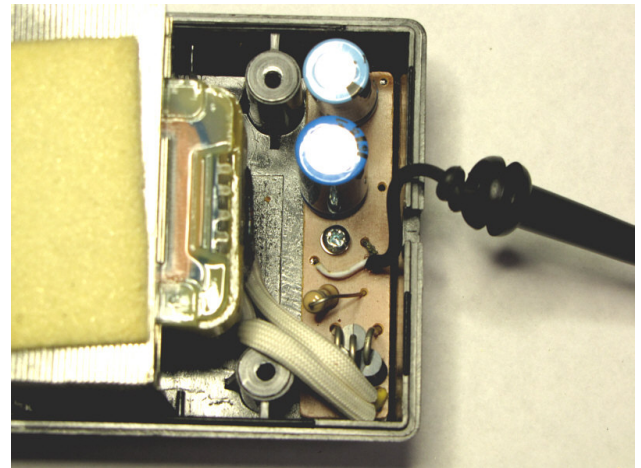

Step 3: Bolt the PCB in place with the screw & spring washer to hold it in place.

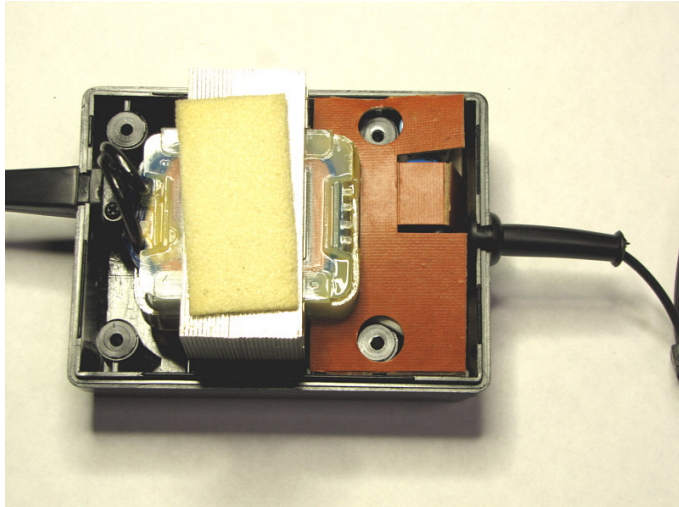

Step 4: Replace the cardboard cover & slot the strain relief grommet into the notch in the case as shown.



Step 5: Screw the case together. Replace the red & black RCA connectors with the red & black 3.5mm mono plugs. When finished, your plug pak supply should look like the picture above.